







A68MV-J3355	A68MV-J3455	A68MV-N4200	
Intel Celeron J3355	Intel Celeron J3455	Intel Pentium N4200	
2.0~2.5GHz	1.5~2.3GHz	1.1~2.5GHz	
Intel HD Graphics 500	Intel HD Graphics 500	Intel HD Graphics 505	
10W	10W	6W	
3	3	3	
1	1	1	
1	1	1	
1	1	1	
6	6	6	
-	-	-	
16	16	16	
-	-	-	









J3	355	:	2.	0~2.5GHz	Intel	HD Graphics 500;
J3	455	:	1.	5~2.3GHz		00;
LAN1	LAN2	POE	802.3af	(15.4W)	
	BOM	RS232/	RS485			



















MSATA

J2 JLV



F_AUDIO	MIC-IN & LINE-OUT
SPK	Wafer2.0
LAN1	RJ45 1 POE
LAN2	RJ45 2 POE
LAN3	RJ45 3
USB1	USB3.0 Type-A
USB2	USB3.0 Type-A
JUSB1	PH2.0-4P USB2.0
JUSB2	PH2.0-4P USB2.0
HDMI1	HDMI
JVGA1	PH2.0-12P VGA
LVDS1	DF13-40P 24 LVDS Co-lay eDP
IVCN	PH2.0-5P LVDS Inverter
JLV	LVDS 5V/3.3V
SATA_PWR	PH2.0-4P SATA
SATA1	SATA3.0





	RS232	RS485
J1	1-2P	2-3P
12	1-3P	3-5P
J2	2-4P	4-6P

1-2	
2-3	



1	HDD LED+	2	PWR LED+	
3	HDD LED-	4	PWR LED-	
5	GND	6	PWRSW	0-8 /
7	Reset	8	GND	5-7
9	NC	10		
1	+5V			
2	DT-			
3	DT+			
4	GND			
1	GND	2	FRONT-JD	
3	MIC_L	4	LOUT_L	
5	MIC_R	6	LOUT_R	
1	L-			
2	L+			2\\//4
3	R+			2 0 0 / 4
4	R-			
2	PWRBTSW			
3	NC			
1	+3.3V			1.0 . 2.2\/
2	LCD_VCC			2_{-3} $\pm 5//$
3	+5V			2-3 +0V



1	+12V			
2	GND			
3	BKLT_ON			
4	BKLT_PWM			
5	+5V			
1	VCC	2	VCC	
3	+3.3v	4	GND	
5		6		
7	GND	8	GND	
9	LVDS1_TX0-	10	LVDS1_TX2-	
11	LVDS1_TX0+	12	LVDS1_TX2+	
13	LVDS1_TX1-	14	LVDS1_TX3-	
15	LVDS1_TX1+	16	LVDS1_TX3+	
17	LVDS1_CLK-	18	GND	
19	LVDS1_CLK+	20	LVDS2_TX2-	
21	DETECT	22	LVDS2_TX2+	
23	LVDS2_TX0-	24	LVDS2_TX3-	Z. I -Z I.DETECT
25	LVDS2_TX0+	26	LVDS2_TX3+	
27	LVDS2_TX1-	28	LVDS2_CLK-	
29	LVDS2_TX1+	30	LVDS2_CLK+	
31	GND	32	GND	
33	EDP0+	34	EDP1+	
35	EDP0-	36	EDP1-	
37	GND	38	AUX-	
39	HPD	40	AUX+	



1	+3.3V		
2	GND		
3	SCL		
4	SDA		



С

	Aptio Setup Utility							
Main	CSTIPC	Advanced	Chipset	Boot	s Securit	y Sa	ave &	Exit
							Item	Specific Help
Syst	em Language:		[Englis	h]				
			_					
Syst	em Time:		[<mark>10</mark> :50:	34]				
Syst	em Date:		[01/01/	2012]				
F1	Help	Select It	em	-/+	Change Valu	ies	F9	Setup Defaults
Esc	Exit	Select Me	nu	Enter	Select Sub-	Menu	F10	Save and Exit



C

	Aptio Setup Utility								
	CSTIPC								
Pri	mary IGFX Boo	ot Display	[HDMI]		Item	Specific Help			
Sec	ondary IGFX I	Boot Display	[Disable]						
LFP	Control	[Enabled]							
LCD	Panel Type	[1280 * 800_S8]							
F1	Help	Select Item	-/+	Change Values	F9	Setup Defaults			
Esc	Exit	Select Menu	Enter	Select Sub-Menu	F10	Save and Exit			



					Aptio	Setup	Utility			
	CS	TIPC								
WatchDog Setting			[Dis	abled]			Item	Specific Help		
					Disa	abled		ה		
					10	S				
					20	S				
					30	S				
F1	Help		Select	Item		-/+	Change Val	lues	F9	Setup Defaults
Esc	Exit		Select	Menu		Enter	Select Sub	o-Menu	F10	Save and Exit

	Aptio Setup Utility								
	CSTIPC								
Wak	e system with	n Fixed	Time	[Disabled]		Item	Specific Help	
			Disabled						
				Enabled					
F 1	Ilaln	Salaat	Ttom	/ 1	Change V	-14-2	FO	Satur Dafaulta	
ΓI	петр	Serect	rtem	-/+	change va	arues	г9	Setup Deraults	
Esc	Exit	Select	Menu	Enter	Select Su	ub-Menu	F10	Save and Exit	



			Aptio	Setup	Utility		
	CSTIPC						
Wak	e system wit	n Fixed Time	[E	nabled]		Iten	n Specific Help
Wak	e up hour <mark>0</mark>						
Wak	e up minute		0				
Wak	e up second		0				
F1	Help	Select Item		-/+	Change Values	F9	Setup Defaults
Esc	Exit	Select Menu		Enter	Select Sub-Menu	F10	Save and Exit

	Aptio Setup Utility								
	CSTIPC								
Net	work	[Do n	ot launc	h]	Iten	n Specific Help			
		Do LAN	not laun 1	ch					
F1	Help	Select Item	-/+	Change Values	F9	Setup Defaults			
Esc	Exit	Select Menu	Enter	Select Sub-Menu	F10	Save and Exit			



		А	ptio Setup	Utility		
	CSTIPC					
BIO	S Lock	[E	nable]		Iten	n Specific Help
			Disable Enable			
F1	Help	Select Item	-/+	Change Values	F9	Setup Defaults
Esc	Exit	Select Menu	Enter	Select Sub-Menu	F10	Save and Exit

			Aptio Se	etup	Utility				
Main	CSTIPC	Advanced	Chipset	Boot	Security	Sa	ve &	Exit	
Boot Configuration							Item	Specific Help	
Setu	ıp Prompt Ti	meout	1						
Boot	up NumLock	State	[On	n]					
Quie	et Boot		[Di	sabl	e]				
Boot	0ption Pri	orities							
Boot	0ption #1		[K	Kinst	ongDataT]				
Boot	Option #2		[U	[UEFI Kingsto]					
Boot	0ption #3		[Ŭ	JEFI:	Built]				
Hard Drive BBS Priorities CSM16 Parameters									
F1	Help	Select Ite	em –	/+	Change Values		F9	Setup Defaults	
Esc	Exit	Select Me	nu Er	nter	Select Sub-Me	nu	F10	Save and Exit	

	Aptio Setup Utility							
			Воо	t				
Воо	t Option #1		[Kinst	ongDataT]	Item	Specific Help		
Boot Option #2 [UEFI Kingsto]								
	KinstongDataTraveler 2.0 General UDisk 5.00 Disable							
F1	Help	Select Item	-/+	Change Values	F9	Setup Defaults		
Esc	Exit	Select Menu	Enter	Select Sub-Menu	F10	Save and Exit		



	Aptio Setup Utility							
		Advanced						
IT8	786E Sup	per IO Configuration			Item	n Specific Help		
Sup Seri	er IO Ch al Port	nip 1 Configuration	IT8772					
F1	Help	Select Item	-/+	Change Values	F9	Setup Defaults		
Esc	Exit	Select Menu	Enter	Select Sub-Menu	F10	Save and Exit		

Serial Port 1Configuration

Aptio Setup Utility



	Aptio	Setup	Utility			
Advanc	ed					
Pc Health Status					Item	Specific Help
CPU Temp		: -58	С			
System Temp		: +34	С			
SYS_FAN Speed		: N/A				
VGFX : +0.840 V						
V1.05S : +1.056 V						
+12S		: +11.	736 V			
+ 5S : +5.040 V						
VSM		: +1.3	80 V			
Smart Fan[Disable]						
F1 Help Select	Item	-/+	Change	Values	F9	Setup Defaults
Esc Exit Select	Menu	Enter	Select	Sub-Menu	F10	Save and Exit



Aptio Setup Utility



			Aptio S	Setup Uti	lity	
Main	CSTIPC	Advanced	Chipset	Boot	Security	Save & Exit
Save	Changes ar	nd Exit				Item Specific Help
Discar	rd Changes	and Exit				
Save (Changes and	d Reset				
Disca	ard Changes	s and Reset				
Save o	change					
Disca	ard change					
Restor	re Defaults	5				
Save	as User De	efaults				
Rest	ore User De	efaults				
Boot	Override					
Kings	toneDataTra	aveler 2.0				
UEFI	: Kingstone	eDataTravel	er 2.0			
UEFI	: Built-in	EFI shell				
Launo	ch EFI Shel	ll from file	esystem dev	vice		